 








Modulate 1820 and 1824 (Straight)

Aug 2018




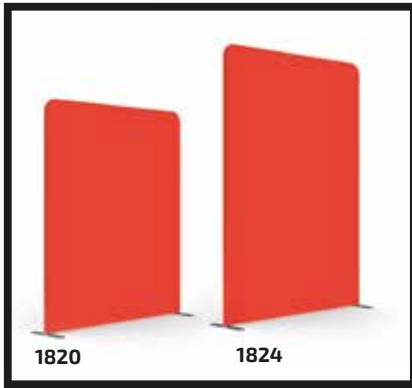


PARTS (NOT TO SCALE)

      1820 Straight

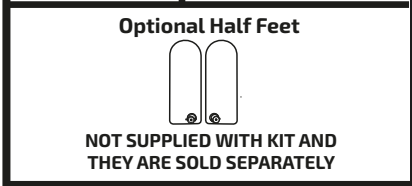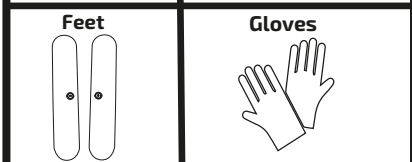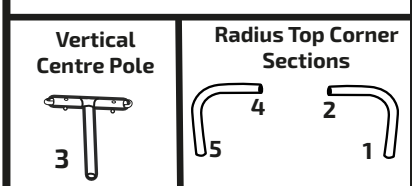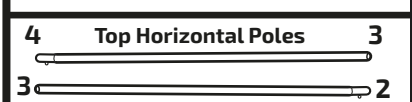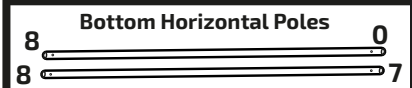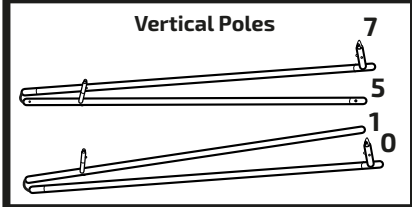

1824 Straight

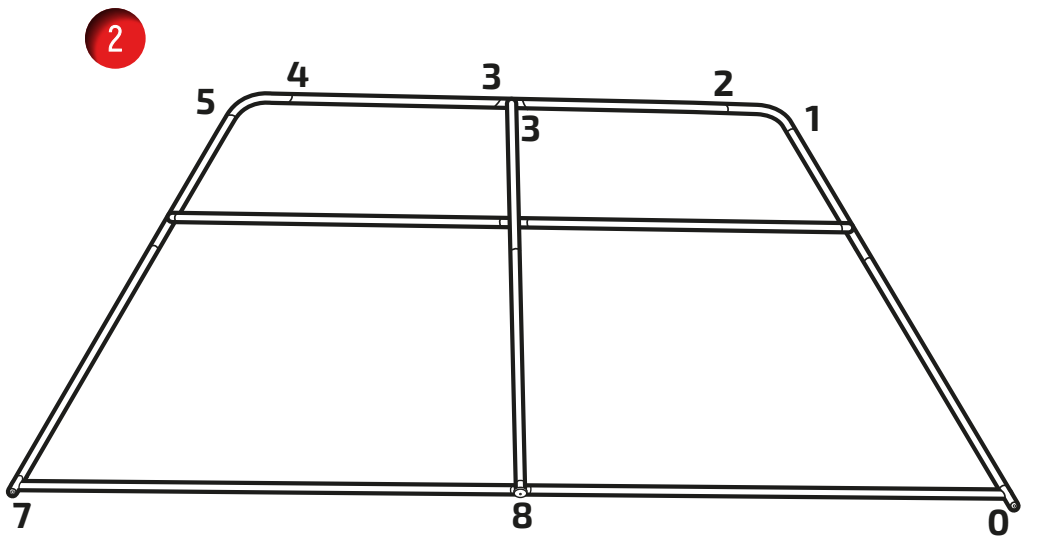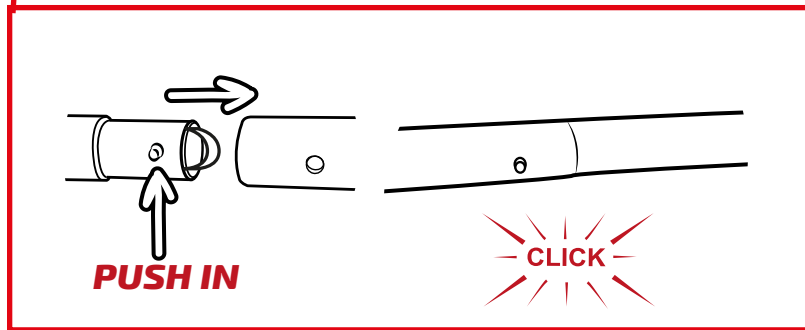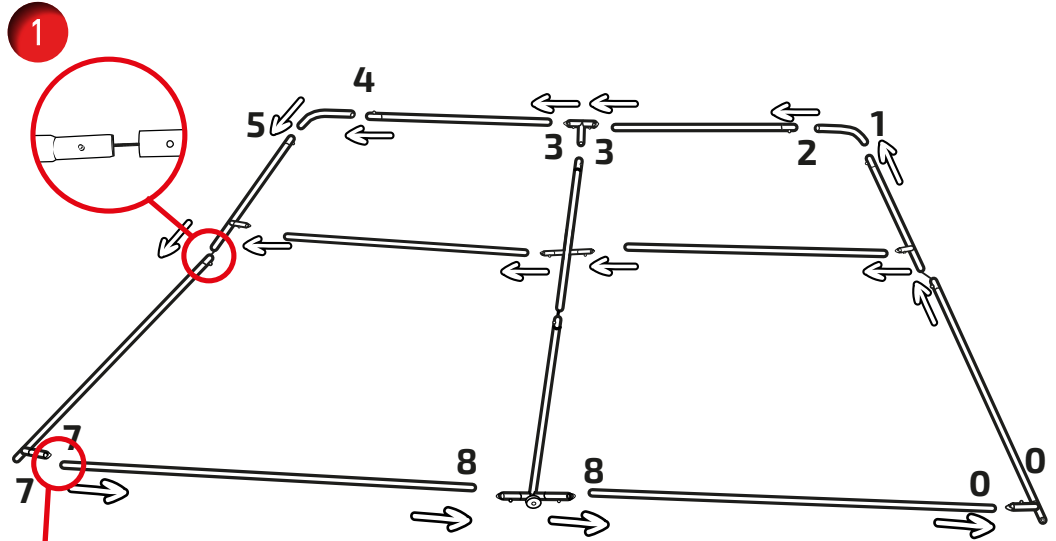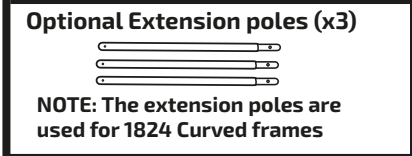   


Modulate 1820 and 1824 (Straight)


Aug 2018



 
1

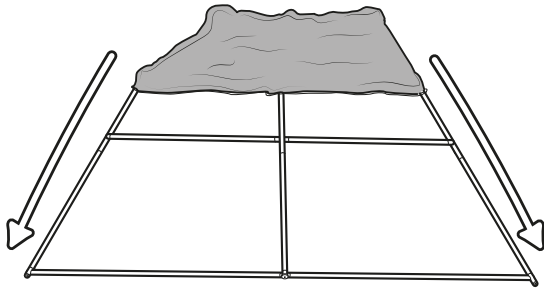


2

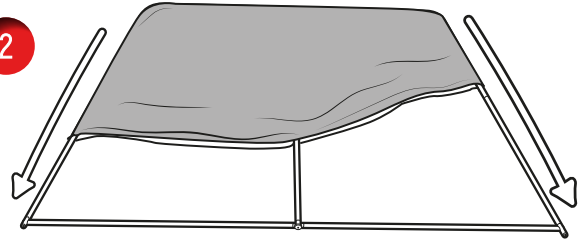 


3

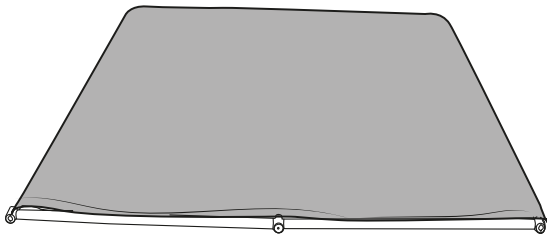 


4

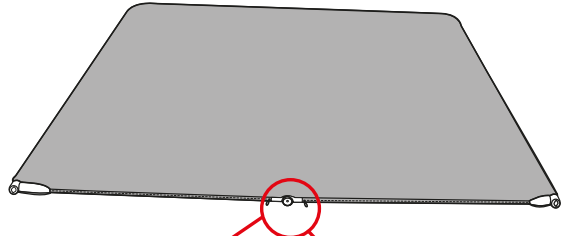


5

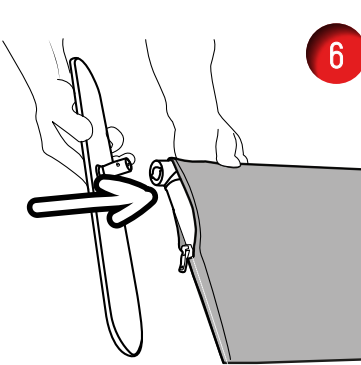 


6

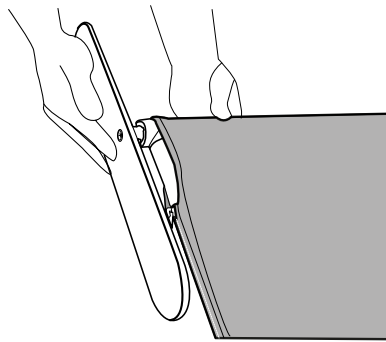 

7

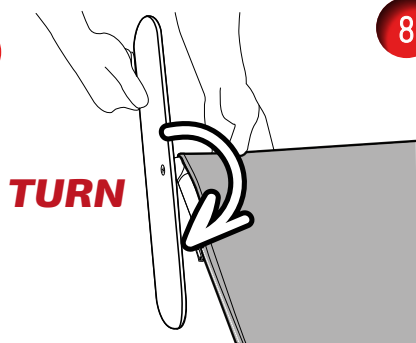 


8

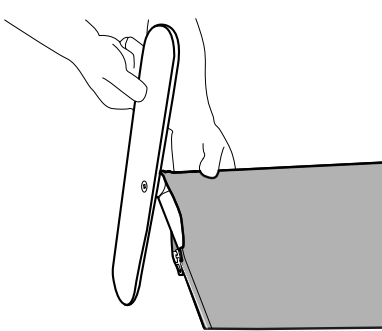

TURN

 Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot

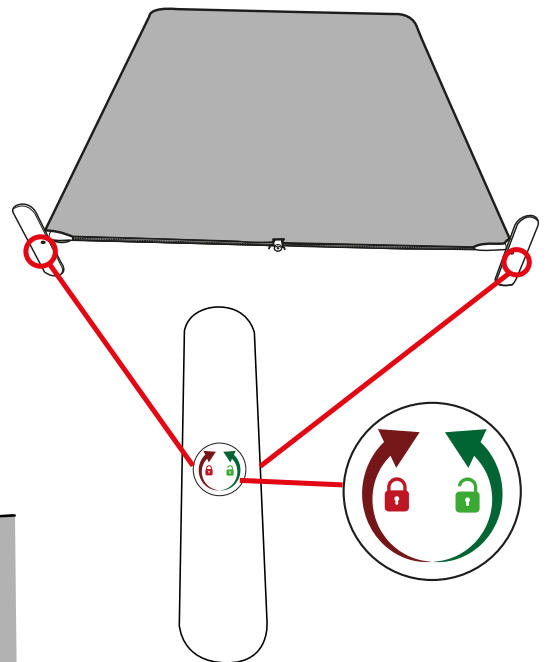


NOTE: Sticker on base of foot shows the directions for locking/unlocking foot

NOTE: TWO POSITIONS FOR THE FEET (SEE OPTION 1 FOR SECOND POSITION)



8





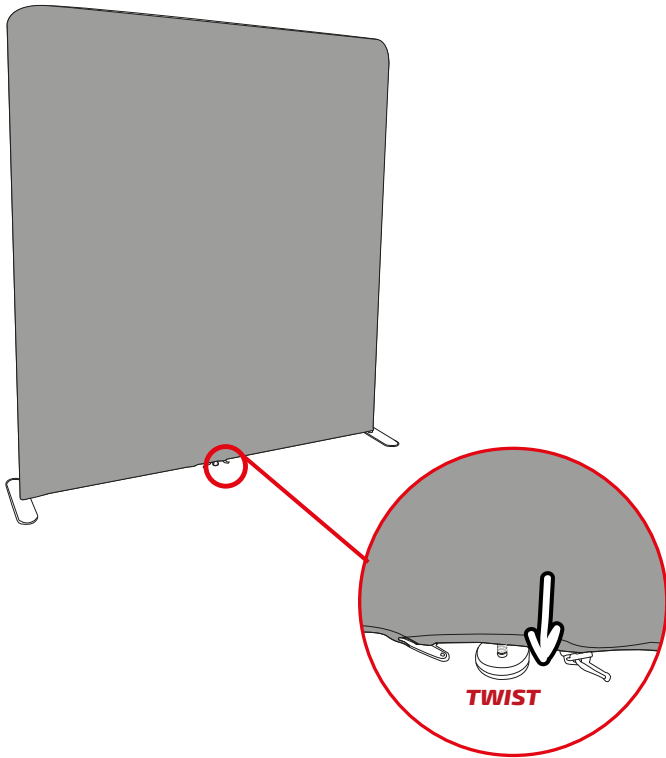


NOTE: Adjustable feet can be used to level frame

OPTIONAL (EXTENSION KIT)
NOTE: EXTENSION SECTION SUPPLIED WITH 1824 FRAME

OPTIONAL (HALF FEET)

     OPTION 1 NOTE: HALF FEET CAN BE POSITIONED ONTO THE FRAME TWO DIFFERENT WAYS

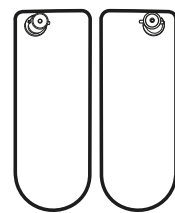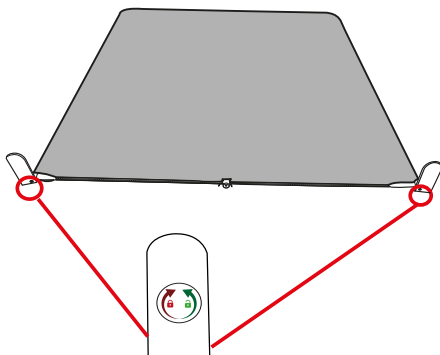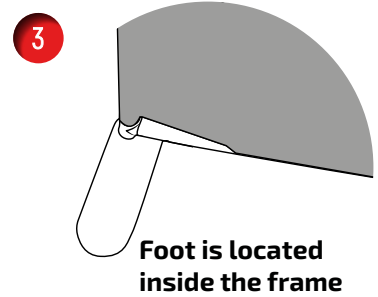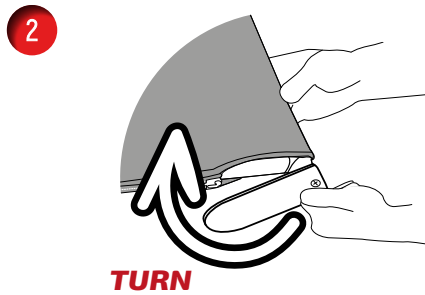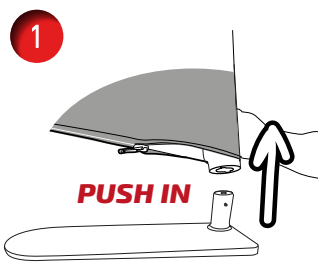


Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot




OPTION 2



 
1

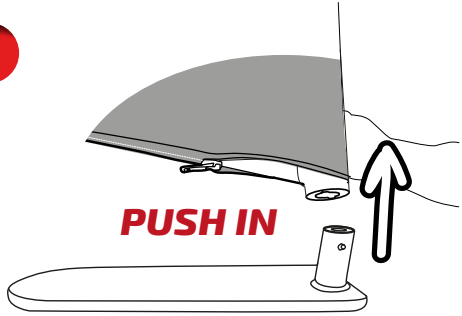


2

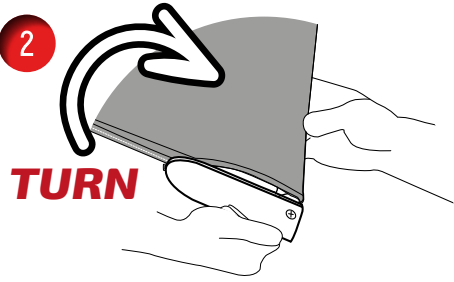 

3

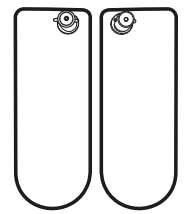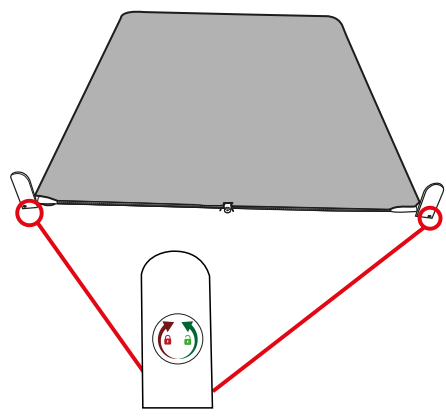  
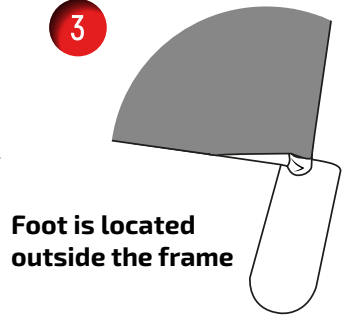 


Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot

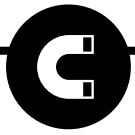

CONNECTING MULTIPLE FRAMES

 NOTE: SECOND FRAME (820 STRAIGHT NOT INCLUDED)

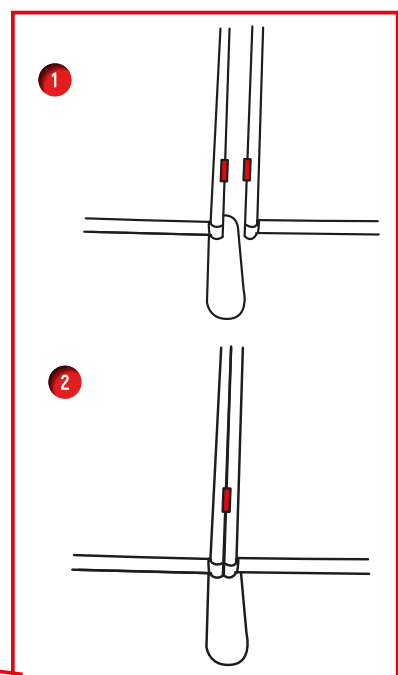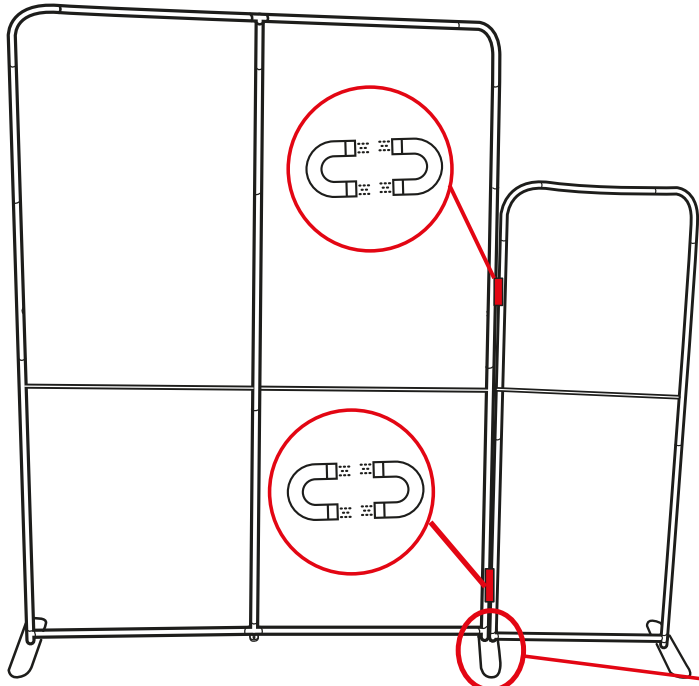

Remove one foot from second frame and align both frames on one foot

NOTE: FOLLOW OPTION 2 FOR HALF FEET TO CONNECT TWO FRAMES ON ONE FOOT

1824 (With Extension) Straight Frame and 820 Straight Frame