




Edge Mounted Screen Clamps

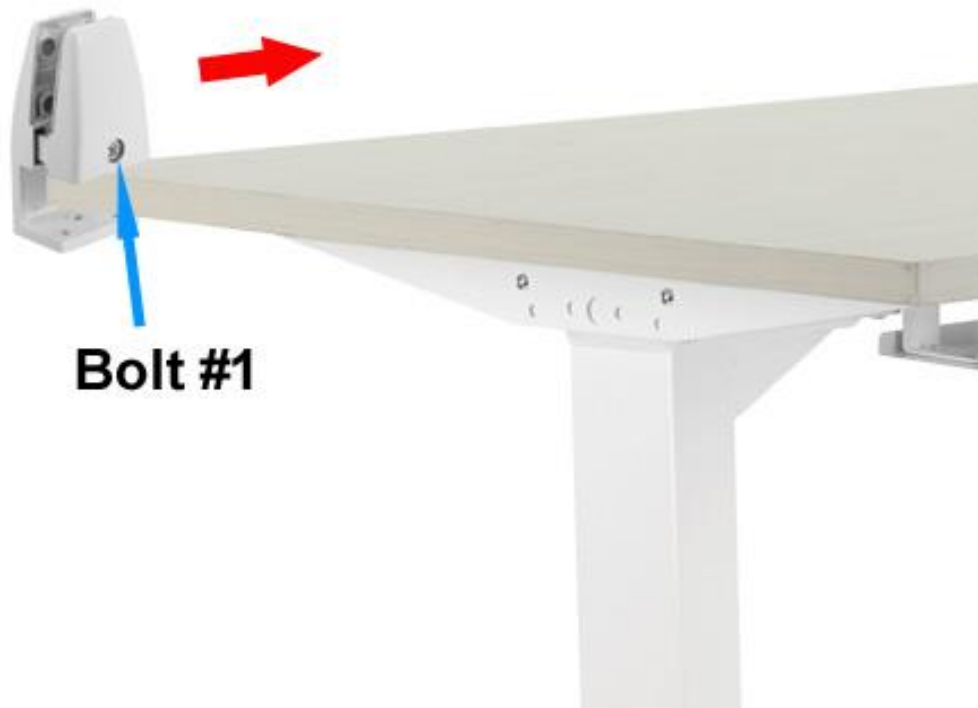

Note: for desktops with thickness of 25mm or less only

1. Push the two brackets over the edge where the screen is to be mounted, as shown,
2. Tighten both brackets from underneath with the supplied bolts,
3. Insert the privacy screen into the mounting brackets, loosen "Bolt #1", as shown, if necessary,
4. Tighten the "Bolt #1" to firmly grip the screen.