



YOUR PACK SHOULD INCLUDE:

- 1x Metal Clamp (in 2 halves)
- 2x Plastic Inserts
- 2x Fixing Bolts
- 1x Allen Key Bolt
- 1x Allen Key



STEP 1:

Attach plastic insert to first half.




STEP 2:

Attached fixing bolts, position first clamp section on edge of desk and secure using allen key.



STEP 3:

Take second clamp section, add plastic insert and the allen key bolt. Position against the first section.

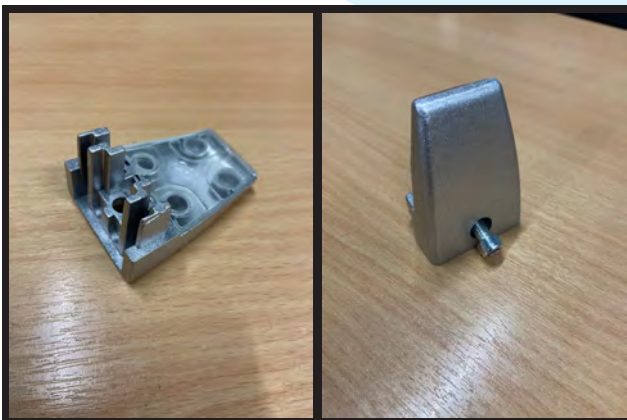

STEP 4:

Insert acrylic screen and tighten allen key bolt with the allen key.

